

SPiDER Scanner - Data Transfer Instructions

P/N MH902, v2 - 01.16.24




CUES Manhole Inspection Division

3600 Rio Vista Avenue
Orlando, Florida 32805



Daily Data Transfer

1. Connect the SPiDER to wall power instead of batteries.
2. The green ethernet cable to the SPiDER should be connected to port GB1 on the PPA computer.
3. Local network cable should be attached to ethernet slot GB2

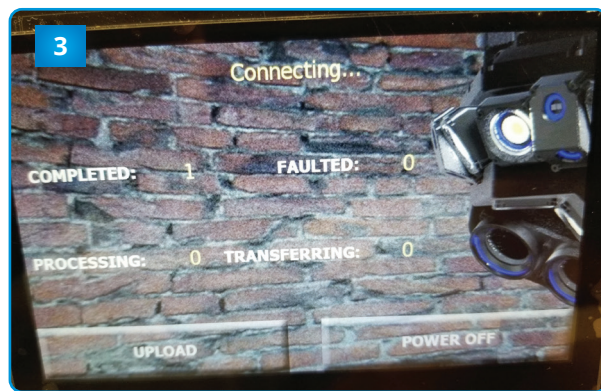

4. Wait until the server status changes from “Connecting” to “Downloading” on the screen:
5. When the server indicates “No Active Downloads”, the SPiDER has been emptied.
6. You can disconnect the SPiDER anytime during data transfer and it will resume when it is connected.
7. Allow the server time to process the data.

NOTE: Once processed, scans will automatically be imported into the “Paired SPiDER Viewer”.



Preparing For The Next Day

- Charge all SPiDER Batteries
- Charge the tablet